

LCD-show Raspberry Pi

Projektseite: <https://github.com/Lcdwiki/>

Um das Minitouchdisplay zu aktivieren:

Raspberry Pi Stand 10.2022

```
rm -rf LCD-show
git clone https://github.com/Lcdwiki/LCD-show.git
chmod -R 755 LCD-show
cd LCD-show/
./MHS35-show
```

Ubuntu Ports ARM 22.04 Stand 10.2022

```
rm -rf LCD-show-ubuntu
git clone https://github.com/Lcdwiki/LCD-show-ubuntu.git
chmod -R 755 LCD-show
cd LCD-show-ubuntu/
./MHS35-show
```

From:

<https://deepdoc.at/dokuwiki/> - DEEPDOC.AT - enjoy your brain

Permanent link:

https://deepdoc.at/dokuwiki/doku.php?id=server_und_serverdienste:lcd-show_raspberry_pi&rev=1666979402

Last update: **2022/10/28 17:50**

